


**PLAN VIEW**

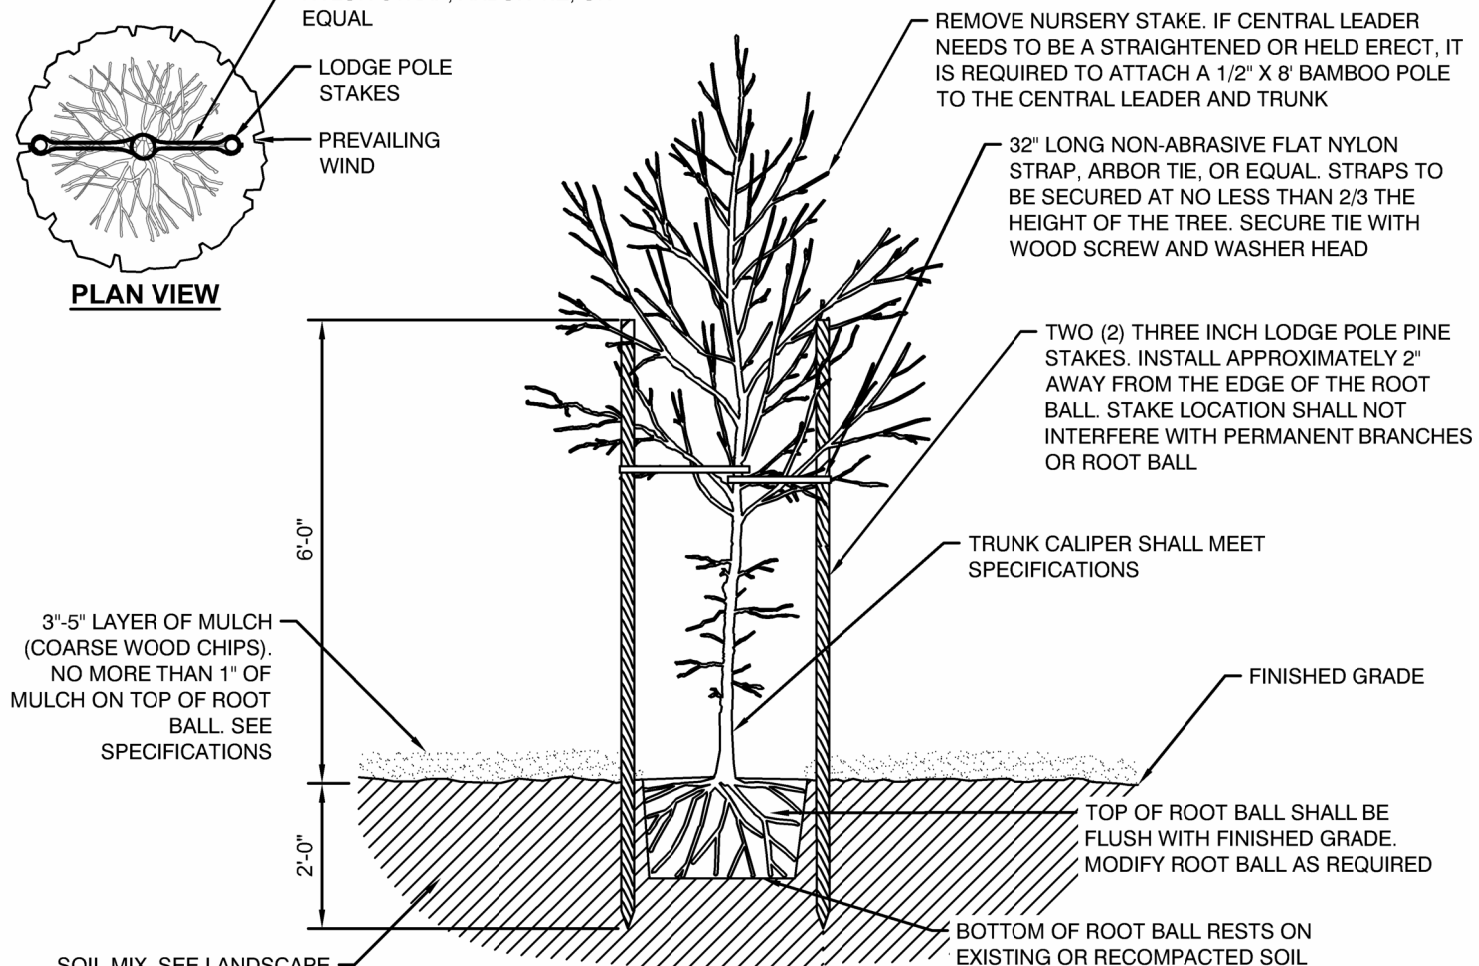

**SECTION VIEW**

**NOTES:**

1. PRIOR TO MULCHING, LIGHTLY TAMP SOIL AROUND THE ROOT BALL IN 6" LIFTS TO BRACE TREE. DO NOT COVER OVER COMPACT. WHEN THE PLANTING HOLE HAS BEEN BACKFILLED, POUR WATER AROUND THE ROOT BALL TO SETTLE THE SOIL
2. SEE SPECIFICATIONS FOR FURTHER REQUIREMENTS RELATED TO THIS DETAIL

**PROWAG AND DOWNTOWN PROJECTS**

**TREE PLANTING AND STAKING WITH LODGE POLES (2)**

**DEPARTMENT OF PUBLIC WORKS**

SURVEY & RIGHT-OF-WAY

DATE: 1/30/24 DRAWN BY: CP

SHEET: 1 OF 1

FILE NAME:

